

Valli & Valli (U.S.A.) INC.


**INSTALLATION TEMPLATE
ROUND ROSETTE LOCKSET AND DEADBOLT**

IMPORTANT NOTE:

If door is beveled, place template on low side of door bevel.


Determine before drilling, length of latch enclosed for proper backset installation. Read instruction sheet before installing lock.

Mark proper center for $2\frac{1}{8}$ " diameter cross bore hole according to lockset requirement.

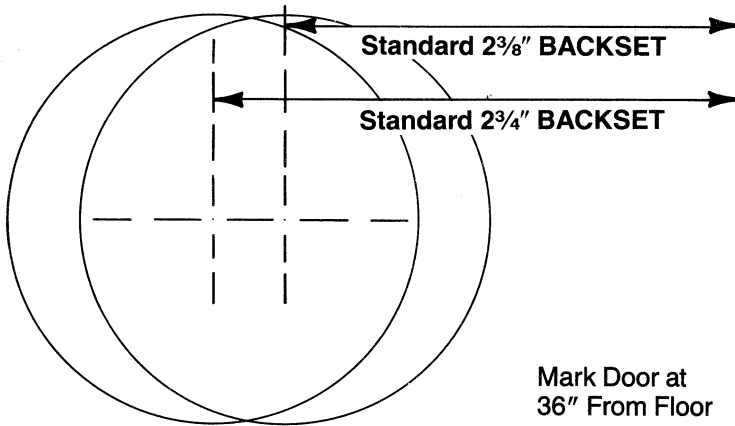

Mark Door at
36" From Floor

← FOLD HERE AGAINST
← EDGE OF DOOR

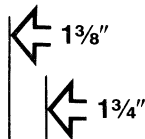

DOOR THICKNESS

MARK FOR 1" HOLE
AT CENTER OF
DOOR THICKNESS